

POWERFLEX®

PART NUMBER

PFF46-602

DESCRIPTION

FRONT ARM REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x PFF46-602 Bushes 1 x PTFE/Silicone Grease
2 x Steel Washers 2 x Stainless Steel Nylock nuts

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the arm from the car and unscrew the nut on the end to allow removal of the OEM bracket. Ensure you keep the OEM washers.
2. Press the OEM bushing out of the bracket and check the bore of the arm for sharp edges and remove with a file if necessary.
3. Push the PFF46-602 bushings into the bore of the bracket. Then place the OEM washers on either side of the bracket as shown in Figure 1 and 2 and slide back onto the arm.
4. Place stainless steel washer on outside of OEM Washer and screw nylock on after, as shown in Figure 2.
5. Reattach arm to car and tighten all fasteners to manufacturers torque settings.



Figure 1

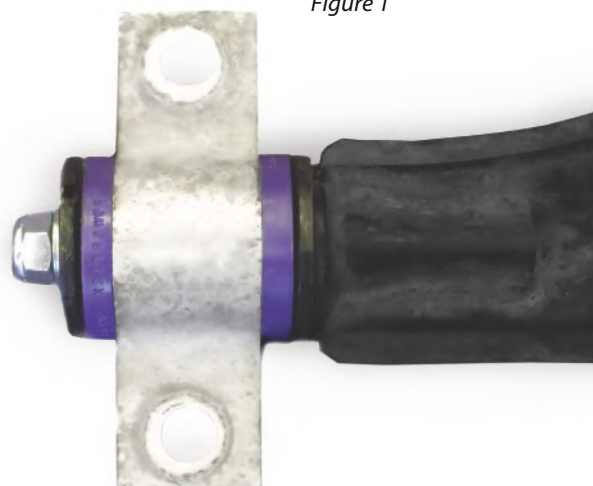


Figure 2

